




# DANGERBUDDIES®

## BUDDYBOARD™ MOUNTING SCHEMATIC

The BuddyBoard™ uses (7) #10 construction screws of varying lengths (all included). The drive size is T-20. Please do not substitute your own screws, as these are engineered to work with the BuddyBoard™. For direct-to-stud mounting on 16" centers, only (4) screws are required; the center screws are not required. For mounting to a wooden backer board or over a door-frame with a headerboard, all (7) screws should be used. Your board will come with specific instructions on which length screws should be used where.

The included hangers mount using the included 3/8" lag screws and lock washers. The hanger goes directly against the wood, with the washer above it. The drive size is 9/16". Do not over-torque these screws. Use just enough torque that the hangers do not spin when gentle pressure with your hand is applied. Use a hand-tool, not an impact driver to set these. Over-torquing may cause hangboard failure, and this failure is non-warrantable.

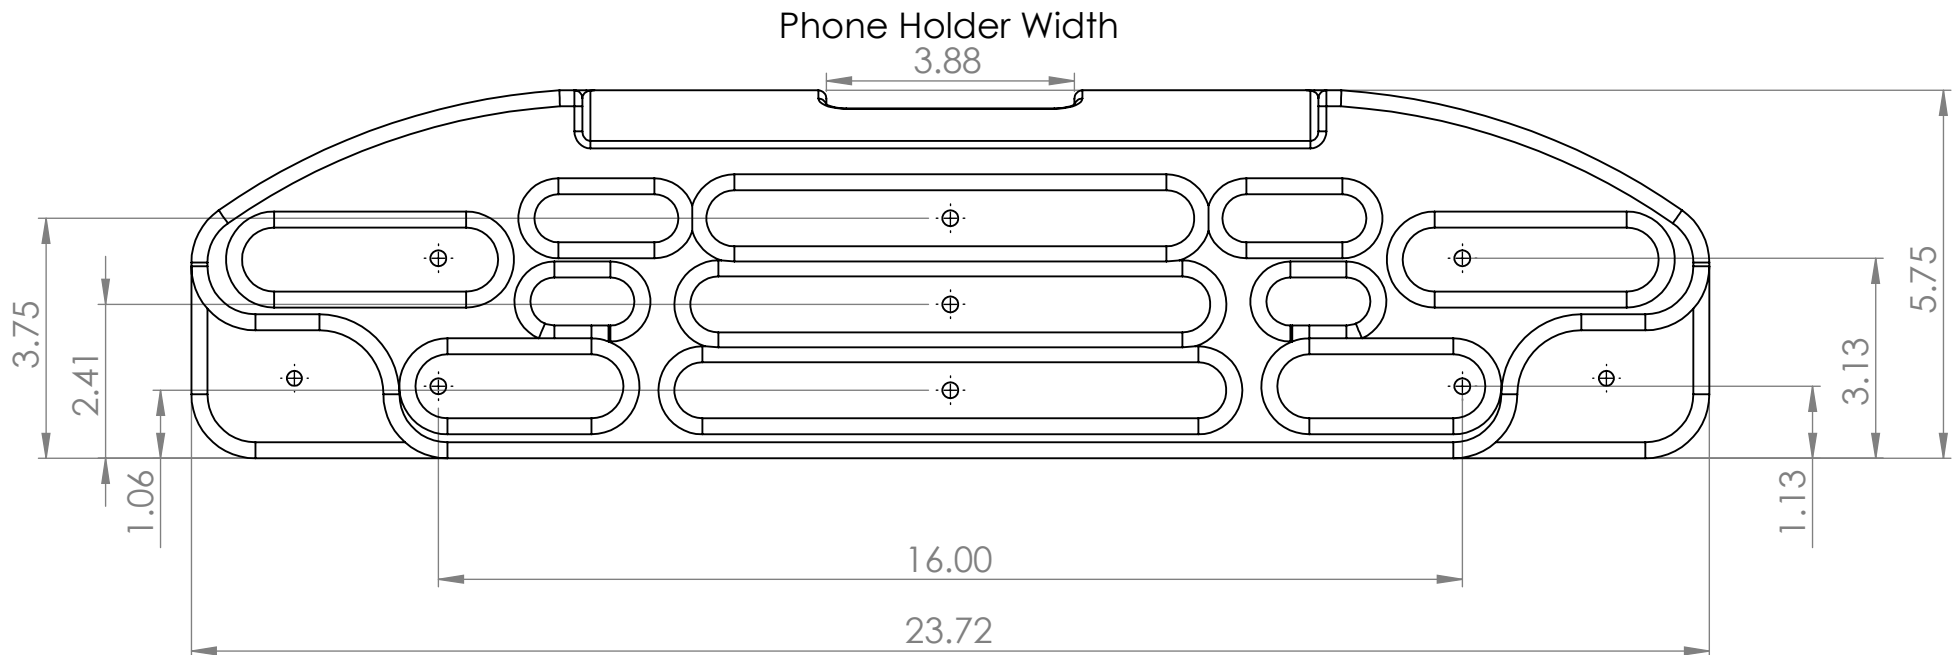

BuddyBoard™ Mounting Schematic  
©2020 Danger Buddies LLC  
Menomonee Falls, WI 53051  
[www.dangerbuddies.com](http://www.dangerbuddies.com)

**SCALE 1:3**  
**ALL DIMENSIONS IN INCHES**