


# DANGERBUDDIES

## BUDDYBOARD+ MOUNTING SCHEMATIC

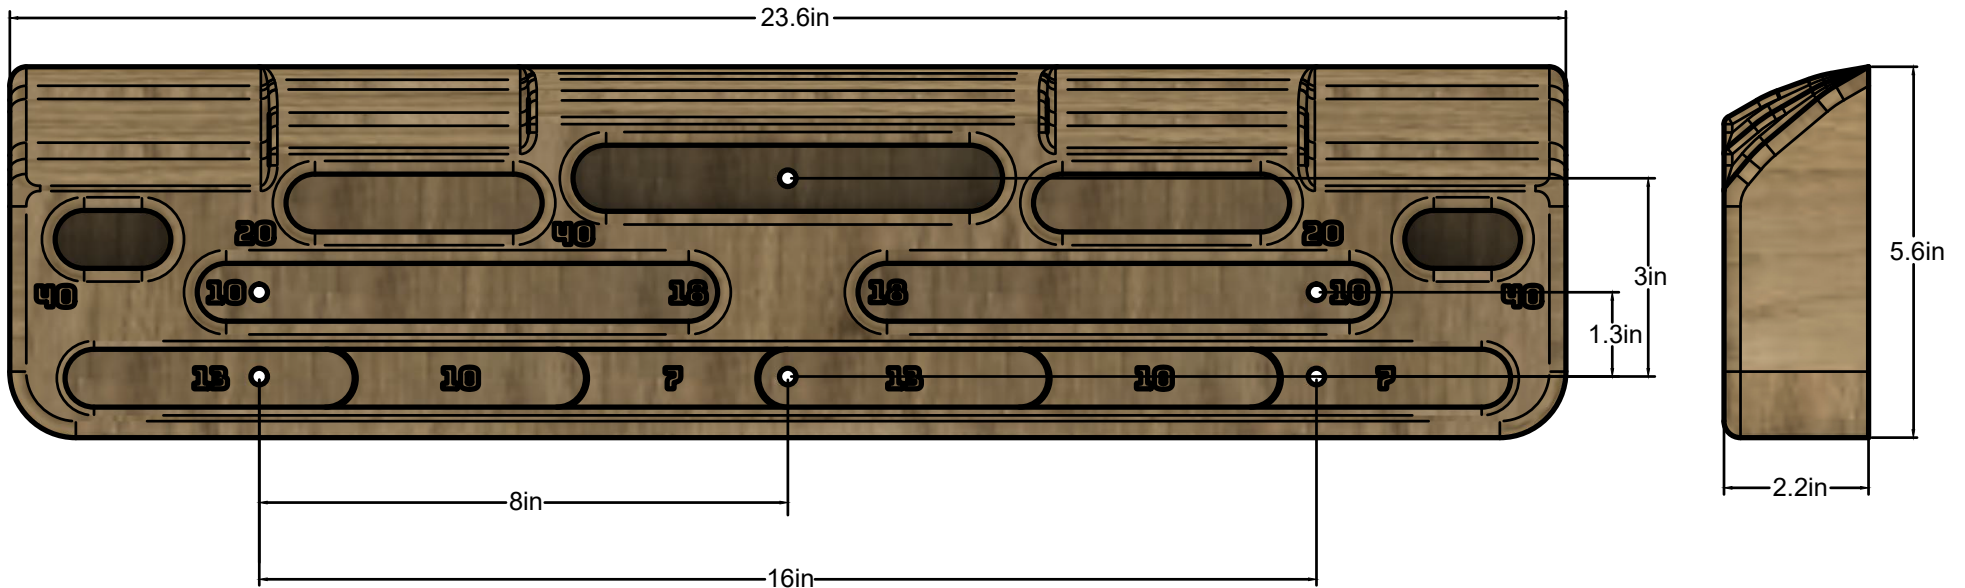

The BuddyBoard+ mounts directly to 16" spaced studs, as is typical in home construction. If direct mounting to studs, the center screws are recommended, but not required, for structural support. The screws are sized to be drilled into your studs through standard 1/2" drywall, or can be direct-mounted to unfinished studs. Please use only the included screws, as our engineers have certified them to carry the expected shear and pull-out loads associated with hangboard use.

If you will mount your hangboard to a plywood backer board, all 6 screws are required for installation, and the backer board must be at least 3/4" thick.

The slopers are curved for ergonomics, but the nominal or effective angle is 20° (center), 30° (middle) and 40° (outer).

Questions? Drop us a note at [feedback@dangerbuddies.com](mailto:feedback@dangerbuddies.com).